

IT - Quando utilizzato come portatile il presente prodotto è adatto solo ad ambienti correttamente isolati o ad un uso occasionale.

EN - When used as portable this product is only suitable for well insulated spaces or occasional use.





RO - Cand aparatul este utilizat ca incalzitor portabil, se recomanda folosirea ocazionala si numai in spatii bine izolate.





PL - Kiedy jest używany jako przenośny Ten produkt jest odpowiedni tylko do sporadycznego użytku lub do stosowania w dobrze izolowanych pomieszczeniach.




NL - Bij gebruik als draagbaar , dit product is uitsluitend geschikt voor goed geïsoleerde plaatsen of voor incidenteel gebruik.

DE - Dieses Produkt ist nur für Räume geeignet, die korrekt isoliert wurden oder für einen gelegentlichen Gebrauch



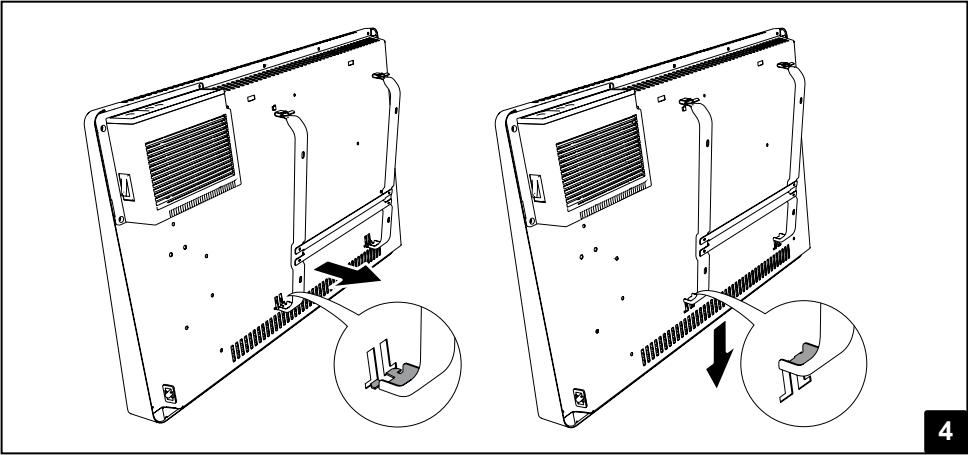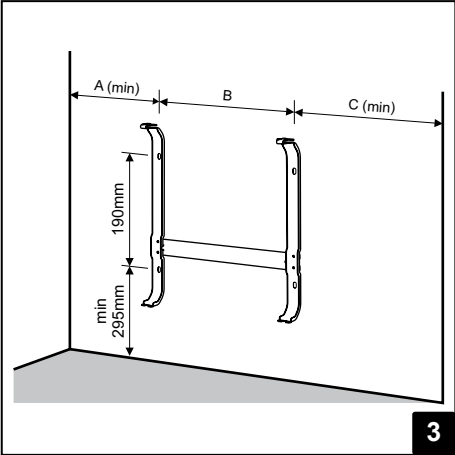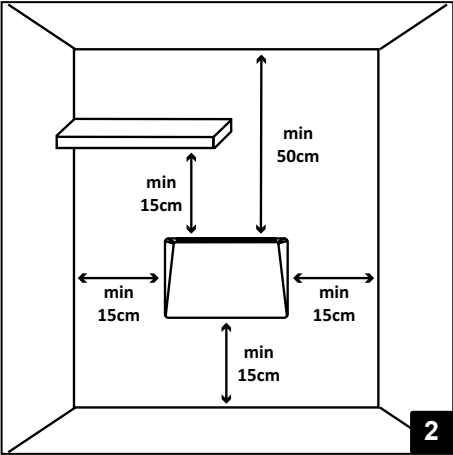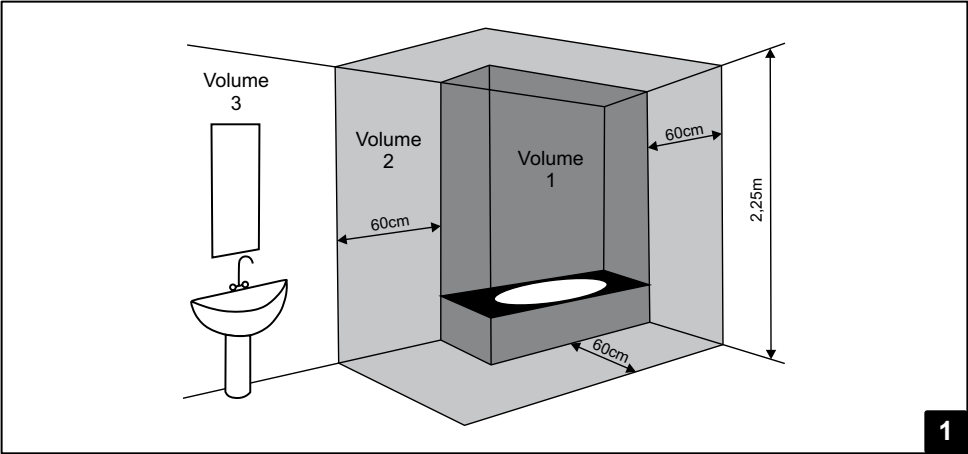

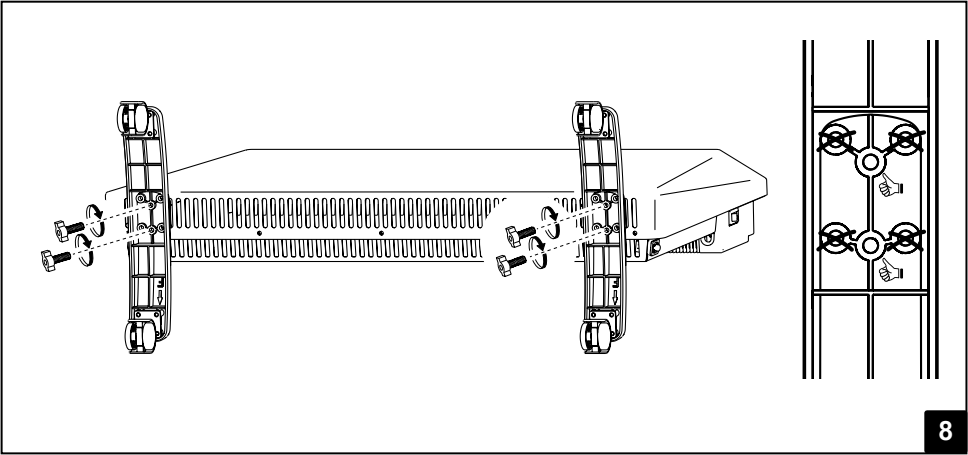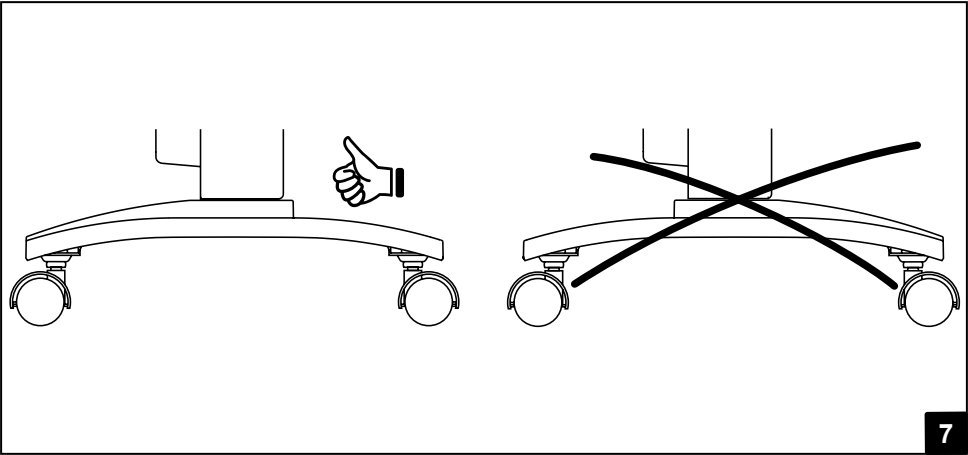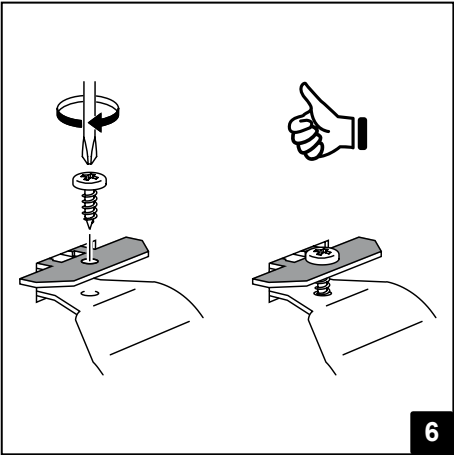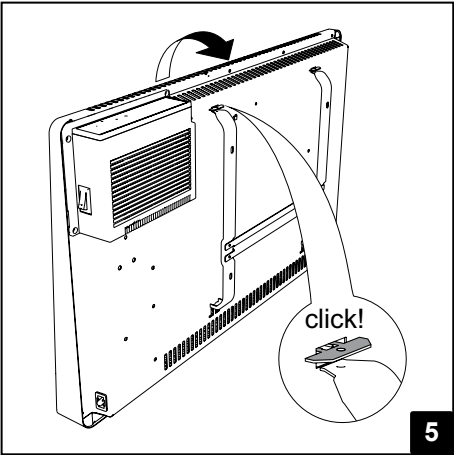

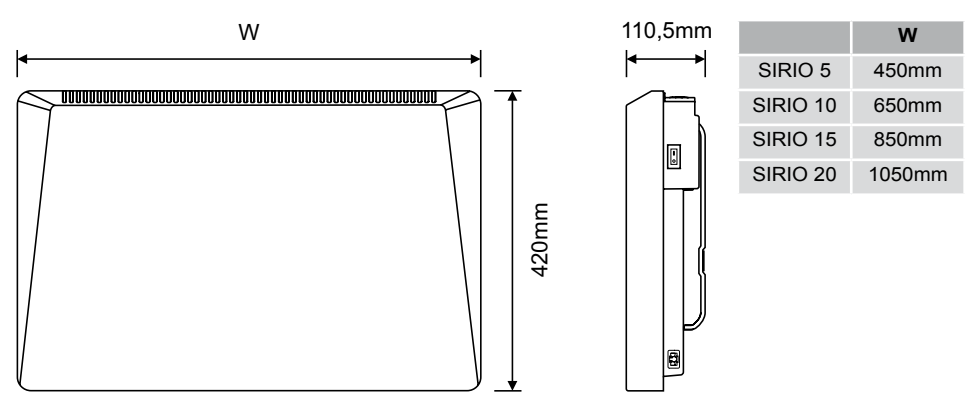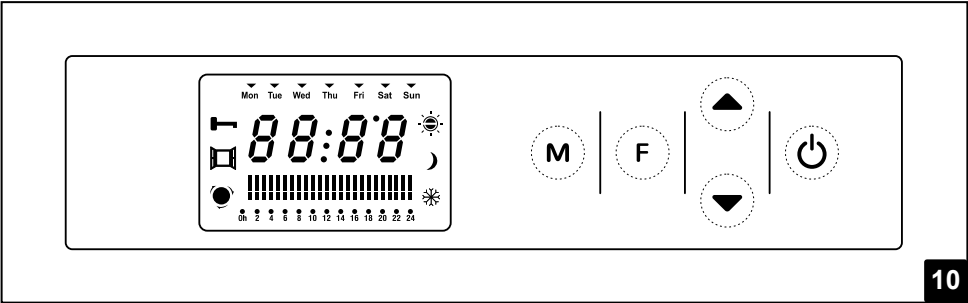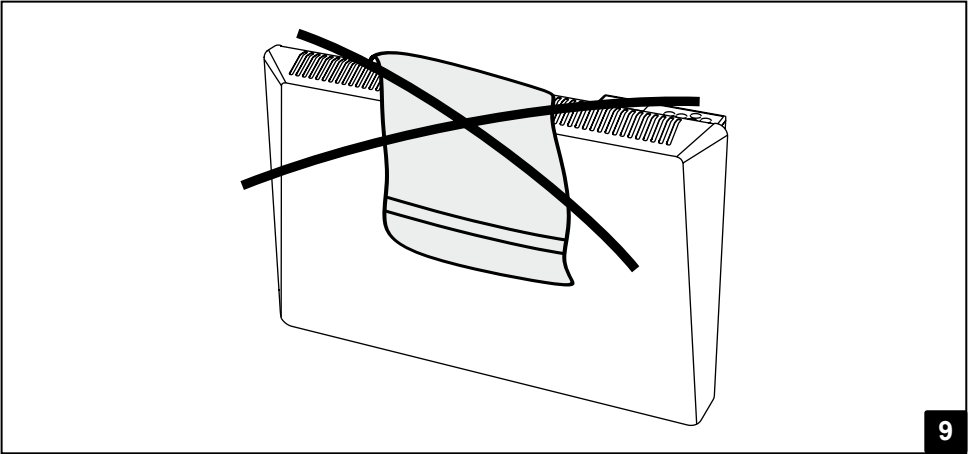

**Before operating the convector, please read these instructions thoroughly to avoid damage and hazardous situations. Any use of this convector other than that stipulated in this instruction manual may cause fire, electric shock or injury, and voids all warranties.**

Warranty does not apply to any defect, deterioration, loss, injury or damage caused by, or as a result of, the misuse or abuse of this heater. The rights dictated by State law are not prejudiced. None of the terms of this warranty are to be taken as excluding any conditions or warranties implied by State law, which cannot be excluded or modified.

Before any operation remove the packaging and check product integrity. In case of defects or damages do not try to repair it yourself but contact your dealer.

Do not let children play with the packaging and protect the environment by disposing of the packaging in accordance with the national regulations for waste processing.

## 1. FOR YOUR SAFETY

- This appliance is intended for normal household use and not for use in commercial/industrial environment, in vehicles or on board ships or aircrafts.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**
- Make sure that your supply rating corresponds to what specified on the rating plate: 230V~, 50Hz.

- This convector has a double water protection level: IPX0 when used as portable and IPX4 when wall-mounted. Respect the regulations of the country concerned about its use in different environments. It can therefore be used in bathrooms or other areas subject to humidity AS LONG AS IT IS NOT INSTALLED WITHIN THE PERIMETER OF BATH TUBS OR SHOWERS. This means that it cannot be installed in the areas marked as VOLUME 1 in picture 1. If used as portable do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool;
- During function, place the convector in a safe position:
  - at least 1m far from inflammable objects or furnitures;
  - leaving not less than 1m of free space in front of the convector;
  - not located immediately below a socket-outlet.
- Do not leave animals or children touch or play with the appliance. Pay attention! The air outlet grille gets hot during operation (more than 90°C)
- **WARNING: In order to avoid overheating, do not cover the heater.** Do not hang anything on the heater and do not cover it while it's working. This is clearly written on the cover of the product or shown by the symbol



- Do not use the heater in rooms with explosive gas or while using inflammable solvents or varnish or glues.
- If the cordset is damaged and you have to change it, do not do the job yourselves! Take the product to an after sales authorised repair centre or to a person with similar skill and knowledge, in order to avoid any risk of danger.
- The appliance must be positioned so that the plug is always accessible.
- Do not mount the product on walls made of synthetic material.
- Do not use this heater if it has been dropped;
- Do not use if there are visible signs of damage to the heater;
- Use this heater on a horizontal and stable surface;
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own,

unless constant supervision is provided.

- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

## 2. WALL MOUNTING

- Fix the convector in horizontal position with the air outlet grid upward;
- This convector is fitted with a double electrical insulation circuit (class II) and therefore does not require earth connection.
- This heater must be correctly installed in compliance with the regulations in force in the country of installation.
- In wet spaces like bathrooms or kitchens, the connection terminal must be installed at least 25 cm above the floor. The electrical connection to the power supply must also be fitted with a two-pole switch with a minimum gap between the contacts that allows complete disconnection according to excess voltage III category conditions.
- The device must be wall-mounted respecting the minimum distances from ceiling, floor and side walls shown in figure 2. The support bracket must be fixed to the wall respecting the distances indicated in figure 3 and specified in the following table. Always observe the minimum distances from walls, furniture and/or objects, as indicated in picture 3.
- To proceed with the installation:
  - Remove the bracket from the product;
  - Drill 4 holes in the wall respecting the distances indicated in figure 3 and specified in the following table:

MODEL	A	B	C
SIRIO 5	205mm	180mm	357mm
SIRIO 10	290mm	260mm	400mm
SIRIO 15	270mm	480mm	400mm
SIRIO 20	250mm	700mm	400mm

- Fix the bracket using the wall plugs and screws suitable for the wall type;
- Verify that the minimum distances previously described are satisfied;
- Approach the product to the bracket until the lower hooks of the bracket are inserted in the slots on the rear panel as shown in figure 4;
- Rotate the upper part of the product towards the wall until it locks, making sure to snap the 2 upper hooks of the bracket as shown in figure 5;
- Lock the 2 upper hooks of the bracket using the supplied screws as shown in figure 6.

## 3. WHEEL FASTENING (OPTIONAL)

- The convector can also be used as a portable product by purchasing the wheels supplied separately.
- To fix the wheels:
  - check the correct orientation as shown in figure 7;
  - fix each of the 2 supports with the wheels using the screws provided as shown in figure 8. The screws can be fixed by hand and do not require any tool.

## 4. COMMANDS DESCRIPTION

- The convector is equipped with an on / off button on the right side. When the product is switched off, the internal electrical components will no longer be under tension.
- The following controls are integrated on the front of the product (figure 10):



Multi-function display to view the operation and activation status of the functions.



Comfort



Comfort - 1 °C



Comfort - 2 °C



Eco



Anti freeze



Keypad lock



Open window detection



Heating in progress



Operation mode selection button.



Special functions button.



Navigation menu button.



Enable/disable stand-by mode button.




## 5. TURNING ON AND OFF




The product is powered by an electromechanical on / off button. Switching off the product pressing this button causes the power supply to the electronic board to be interrupted and the current time and day to be canceled. We recommend using it only if you do not use the product for a long time and instead use the on / stand-by button on the control panel in the event of a short operating interruption of the device. This way you will not lose the adjustment settings previously entered.

When switched on, the convector activates the last mode used before switching off or power failure. The time is reset at 12:00 and the day of the week on Monday.

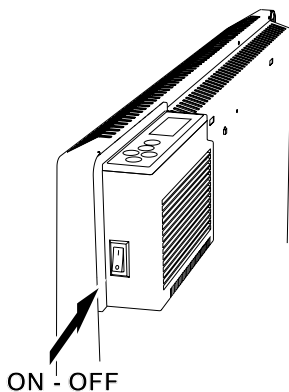

Use the Power / Stand-by button to turn the convector on and off without losing the stored time.

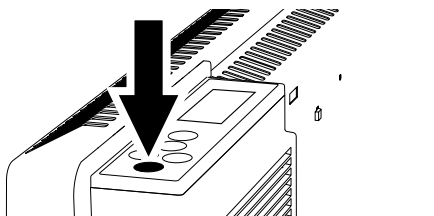

## 6. OPERATING MODES

M

By pressing  button it is possible to select one of the following 6 operating modes:




### COMFORT mode

The convector operates to reach and maintain the set comfort temperature.

The symbol corresponding to the Comfort mode lights up.

The heating symbol lights up when the heating element is operating.

In this mode, the open window detection function is available (see the FUNCTIONS button).

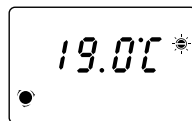


### COMFORT mode -1

The convector operates to achieve and maintain the set comfort temperature reduced by 1° C.

The symbol corresponding to the Comfort mode lights up.

The heating symbol lights up when the heating element is operating.

In this mode, the open window detection function is available (see the FUNCTIONS button).




### COMFORT mode -2

The convector operates to achieve and maintain the set comfort temperature reduced by 2° C.

The symbol corresponding to the Comfort mode lights up.

The heating symbol lights up when the heating element is operating.

In this mode, the open window detection function is available (see the FUNCTIONS button).




### ECO mode

The convector operates to achieve and maintain the set comfort temperature reduced by 3.5° C.

The symbol corresponding to the Eco mode lights up.

The heating symbol lights up when the heating element is operating.

In this mode, the open window detection function is available (see the FUNCTIONS button).




### ANTI-FREEZE mode

The thermostat is automatically set at the temperature of 7±3 ° C.

The symbol corresponding to the antifreeze mode lights up.

The heating symbol lights up when the heating element is operating.

In this mode the open window detection function is not available.



### PROGRAMMED mode

The convector works to reach and maintain the temperature set in the weekly program (see the paragraph about WEEKLY PROGRAMMING).

The symbol corresponding to the operating mode (Comfort, Comfort-1, Comfort-2, Eco or Anti-freeze mode) lights up according to the settings for the current time and day.

In this mode, the open window detection function is available (see the FUNCTIONS button).



## 7. SPECIAL FUNCTIONS


F

By pressing  button it is possible to select one of the following 3 special functions:



### RESET function


By activating this function all the settings are restored to the initial factory value. The comfort temperature is set to 19.0 °C, the preset program is the one described in the appropriate section and the open window detection function is deactivated.



5"

To RESET press the  button for at least 5 seconds.

The convector is automatically set in Comfort mode.




### OPEN WINDOW DETECTION function

This function allows to identify the opening of a window and to automatically set the Antifreeze operation mode.




If a sharp reduction of the ambient temperature is detected during the normal operation of the product, the antifreeze mode is automatically activated to reduce energy wastes. The window symbol and the antifreeze symbol flash to indicate that the function is activated.

The restoration of normal operation is not automatic but is obtained by pressing any of the 5 buttons of the product.




The correct functioning of this function may depend on the positioning of the product in the room, the presence of drafts, the external temperature and the window opening time.




Activate the function by pressing the  button.

The window symbol lights up on the display.



Deactivate the function by pressing the  button.


The window symbol turns off on the display.







## LOCK function



By activating this function all the keys are deactivated to prevent unwanted modifications of the operating settings.




Activate the function by pressing the  button for at least 5 seconds.

The key symbol lights up on the display and the keys are locked.



Deactivate the function by pressing the  and  buttons simultaneously for at least 5 seconds.

The key symbol turns off, the buttons work again.



## 8. TEMPERATURE CONTROL

The electronic temperature control is based on the value that the user assigns to the COMFORT temperature.

The temperature values for the Comfort-1, Comfort-2, Eco and Antifreeze modes are automatically calculated and can not be directly modified by the user. The reference temperature is always indicated on the display together with the symbol representing the selected operating mode.

NOTE: The temperature measured by the sensor inside the product always indicates the ambient temperature in the immediate vicinity of the product and may differ from the temperature measured with other instruments in other areas of the room. This difference may depend on various factors, such as:

- The installation position: some areas of the room may be affected by currents or warm air pockets that can change the sensor measurement;
- The installation on an external perimeter wall, which is normally colder than internal walls, may result in a lower temperature measurement than the actual room temperature;
- Unstable conditions: each evaluation must be made under stable operating conditions. For this reason the Comfort temperature should not be changed before 60 minutes have elapsed since the previous modification. In fact, it is not possible to assess whether the room temperature is correctly maintained by the product if the temperature level is continuously modified in a short period of time.

If the difference between the set temperature and the ambient temperature is detected in stability conditions, calculate this difference and then increase or decrease the comfort temperature level on the product of the exact calculated difference value.

## 9. DATE AND TIME SETTING

To set the current time and date, proceed as follows:



Keep pressing the (M) button until the programmed mode is selected.




Press the (M) button for at least 3 seconds until the day of the week starts to flash.



Use ▲ and ▼ buttons to select the current date.



Press the (M) button to switch between day setting to time setting.

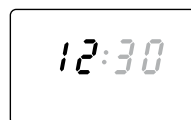

Use ▲ and ▼ buttons to select the current time.




Press the (M) button to switch between hour setting and minutes setting.



Use ▲ and ▼ buttons to select the current minutes.




Press the (M) button to end the setting and return to the Programmed mode.

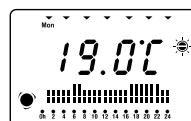


## 10. WEEKLY PROGRAMMING

The weekly programming allows you to set the desired operating mode for each hour of the day and for each day of the week. The convector is supplied preset with the following weekly program:

**Monday - Friday**

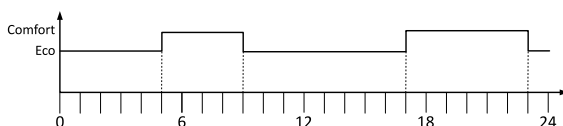

**Saturday - Sunday**

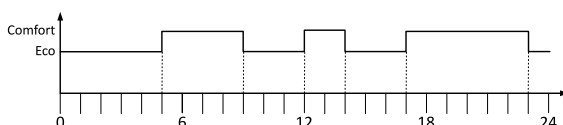


To view / modify the program, proceed as follows:



Press the **(M)** button until the Programmed operating mode is activated.



Press the **(F)** button for at least 3 seconds to enter the view / edit the Programming mode.  
On the first day of the week, the set temperature and the corresponding symbol start to flash.

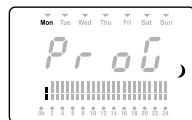


Use **(▲)** and **(▼)** buttons to select the different times of the day and the **(M)** button to change the operating mode of each hour.



Each time the **(M)** button is pressed, the operating mode changes following the sequence:



Comfort > Comfort-1 > Comfort-2 > Eco > Anti-freeze




Press the **(F)** button to view / edit the following day.



If you wish to copy the settings for one day to another (following), proceed as follows:




Select the day you want to copy the settings from and press **(▲)** and **(▼)** buttons at the same time.  
The word "COPY" appears on the display confirming that it has been saved.

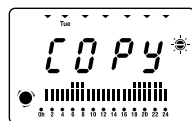

Press the **(F)** button to select the day you want to program with the same program you just copied.



Press **(▲)** and **(▼)** buttons together again to paste the program on the selected day. The word PROG appears on the display.

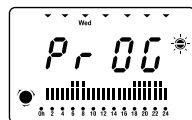

Press the **(F)** button to view / edit the following day.  
The procedure ends by pressing the button again after viewing / editing the last day of the week. The display returns to show the programming settings for the current day and time.



## 11. TROUBLESHOOTING

- In the event of overheating, the safety device on the appliance automatically disabled the heating elements. In this case:
  - Turn off the convector and allow it to cool down for about 15/20 minutes.
  - Eliminate any other possible reasons for overheating (e.g.: obstructions in front of the air inlet/outlet grilles, build-ups of dirt).
  - Turn on the convector again and check it works correctly.

## 12. MAINTENANCE

- This product does not require any special maintenance.
- Clean the product with a dry cloth once every 6 months.
- If the product requires repairing, contact an authorised technical service centre.
- When replacing the power cable, use a 2x0,75mm<sup>2</sup> H05RR-F or 2x1,00 mm<sup>2</sup> H05RR-F <HAR> type. This operation must be performed by qualified personnel and never by the end user in order to avoid damaging the appliance and jeopardising personal safety.

## 13. LEGAL NOTICE



### **Environment and recycling**

To avoid damages during transport, your device has been carefully packed. To contribute to the protection of our environment, we ask you to dispose of the packaging materials properly.

### **Recycling of obsolete appliances**

Appliances with this label must not be disposed off with the general waste but they must be collected and disposed of separately. The disposal of used devices must be carried out with precision, in compliance with the locally applicable regulations and laws in force.

## Information requirements for electric local space heaters

Model identifier(s): SIRIO					
Item	Symbol	Value	Unit	Item	Unit
<b>Heat output</b>				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	$P_{nom}$	(*)	kW	manual heat charge control, with integrated thermostat	no
Minimum heat output (indicative)	$P_{min}$	(**)	kW	manual heat charge control with room and/or outdoor temperature feedback	no
Maximum continuous heat output	$P_{max,c}$	(***)	kW	electronic heat charge control with room and/or outdoor temperature feedback	no
<b>Auxiliary electricity consumption</b>				heat output	no
At nominal heat output	$eI_{max}$	0,000	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	$eI_{min}$	0,000	kW	single stage heat output and no room temperature control	no
In standby mode	$eI_{SB}$	0,162	W	Two or more manual stages, no room temperature control	no
				with mechanic thermostat room temperature control	no
				with electronic room temperature control	no
				electronic room temperature control plus day timer	no
				electronic room temperature control plus week timer	yes
				<b>Other control options (multiple selections possible)</b>	
				room temperature control, with presence detection	no
				room temperature control, with open window detection	yes
				with distance control option	no
				with adaptive start control	no
				with working time limitation	no
				with black bulb sensor	no
Contact details	Your dealer or Ermete Giudici S.p.A. - via L. da Vinci, 27 - 20090 Segrate (MI) Italy				

(*)	SIRIO 5 = 0,50	SIRIO 10 = 1,00	SIRIO 15 = 1,50	SIRIO 20 = 2,00
(**)	SIRIO 5 = 0,25	SIRIO 10 = 0,50	SIRIO 15 = 0,75	SIRIO 20 = 1,00
(***)	SIRIO 5 = 0,50	SIRIO 10 = 1,00	SIRIO 15 = 1,50	SIRIO 20 = 2,00